

Series HS TS PS

Standard Size Rotary Switches

GENERAL SPECIFICATIONS

Electrical Capacity

Resistive Load: HS13: 6A @ 125V AC, 3A @ 250V AC, or 5A @ 30V DC HS16: 12A @ 125V AC or 6A @ 250V AC TS: 6A @ 125/250V AC PS: 30A @ 125/250V AC

Other Ratings

•	
Contact Resistance:	10 milliohms maximum
Insulation Resistance:	200 megohms minimum @ 500V DC
Dielectric Strength:	1,500V AC minimum
Mechanical Life:	HS: 15,000 operations minimum
	TS: 30,000 operations minimum
	PS: 10,000 operations minimum
Electrical Life:	HS: 7,500 operations minimum
	TS: 10,000 operations minimum
	PS: 5,000 operations minimum
Indexing:	30° for HS16, TS & PS; 45° for HS13
Contact Timing:	Nonshorting HS-13; Shorting & Nonshorting HS-16; Nonshorting TS; Nonshorting PS
Range of Operating Torque:	HS16: 5.5 ~ 6.5 kg-cm for first pole & 0.5 kg-cm for each additional pole
	HS13: 1.5 ~ 2.4 kg-cm
	TS: 0.9 kg-cm for first pole & (0.7 kg-cm X total number of poles) + 1.3 kg-cm for
	additional poles
	PS: 1.4 kg-cm for each pole

Materials & Finishes

Knob:	Phenolic resin
Shaft:	HS13: brass; HS16, TS, & PS: brass with nickel plating
Bushing:	HS13: brass; HS16, TS, & PS: brass with nickel plating
Case:	Phenolic resin
Movable Contacts:	HS13, HS16, & TS phosphor bronze; PS silver alloy
Stationary Contacts:	HS13, HS16, & PS: brass with silver plating; TS: phosphor bronze
Terminals:	HS: phosphor bronze; TS & PS: copper with silver plating

Environmental Data

Operating Temp Range:	-10°C through +70°C (+14°F through +158°F)
Humidity:	90 ~ 98% humidity for 96 hours @ 40°C (104°F)
Vibration:	10 ~ 55 Hz with peak-to-peak amplitude of 1.5mm traversing the frequency range
	& returning in 1 minute; 3 right angled directions for 2 hours
Shock:	50g acceleration (tested in 3 right angled directions, with 3 shocks in each direction)

Installation

Mounting Torque:	30 kg/cm (26 lb/in)
Maximum Panel Thickness:	Shown with panel cutouts in following drawings
Soldering Time & Temperature:	3 seconds @ 350°C or 5 seconds @ 270°C

Standards & Certifications

UL Recognized:

HS-16 models 1- through 6-pole are recognized at 12A @ 125V AC & 6A @ 250V AC See Supplement Index to find UL rating details. UL File No. E44145 Add "/U" to end of part number to order UL mark on switch.







Standard Size Rotary Switches


6 AMP SINGLE POLE/NONSHORTING/45° INDEXING								
Model	Number of Positions	Stopper Settings	Number of Terminals	Load Terminals	HS13-X € of Keyway	Schematics	HS13-Z & of Keyway	
HS13-X	2	Fixed	1 COM, 2 LOAD	1 & 2				
HS13-Y	3	Fixed	1 COM, 3 LOAD	1, 2, & 3	10	10++(10++(-+)-	
HS13-Z	4	Fixed	1 COM, 4 LOAD	1, 2, 3, & 4	C10	CIOVI	CIO	

Switch is viewed from shaft end and shown in position 1. Terminal numbers are not on switch. Standard Hardware shown on last page of this section.

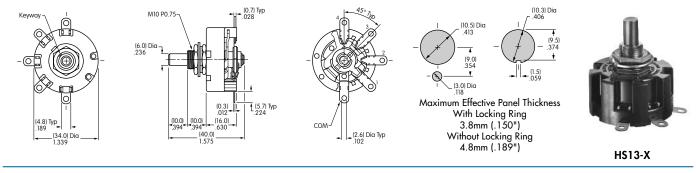


	12 AMP/SHORTING & NONSHORTING/30° INDEXING									
Knurled	Shaft	D-flat Shaft		D-flat Shaft			Number of	Stopper	Number of	
Nonshorting	Shorting	Nonshorting	Shorting	Pole	Positions	Settings	Terminals	Schematic		
HS16-1	HS16-15	HS16-1N	HS16-1SN	1P	2-11	2, 3, 4 11	1 COM, 11 LOAD			
H\$16-2	HS16-2S	H\$16-2N	HS16-2SN	2P	2-11	2, 3, 4 11	2 COM, 22 LOAD	$10 \qquad 1 \qquad 0^2$		
H\$16-3	HS16-3S	H\$16-3N	HS16-3SN	ЗP	2-11	2, 3, 4 11	3 COM, 33 LOAD	100 03		
HS16-4	HS16-4S	H\$16-4N	HS16-4SN	4P	2-11	2, 3, 4 11	4 COM, 44 LOAD			
H\$16-5	HS16-5S	H\$16-5N	HS16-5SN	5P	2-11	2, 3, 4 11	5 COM, 55 LOAD			
H\$16-6	HS16-6S	H\$16-6N	HS16-6SN	6P	2-11	2, 3, 4 11	6 COM, 66 LOAD	0 0 0 7 6		

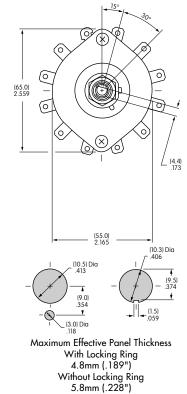

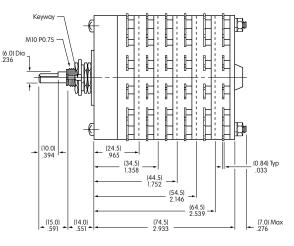

- On each deck of multipole devices common and load terminals are in the same positions as shown in the schematic above.
- Switch is viewed from the shaft end and shown in position 1.
- Terminal numbers are on the switch bottom. Stopper positions are molded on the top of the switch.
- Standard Hardware shown on last page of this section.

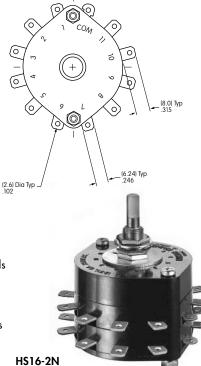




Series TS

Standard Size Rotary Switches


	6 AMP/NONSHORTING/ADJUSTABLE STOP/30° INDEXING								
Model	Pole	Number of Positions	Stopper Settings	Number of Terminals	Shaft Type	Schematic			
TS-1N	1P	2-11	2, 3, 4 11	1 COM, 11 LOAD	D Flat	Ç of Keyway			
TS-2N	2P	2-11	2, 3, 4 11	2 COM, 22 LOAD	D Flat				
TS-3N	ЗР	2-11	2, 3, 4 11	3 COM, 33 LOAD	D Flat	On each deck of multipole devices			
TS-4N	4P	2-11	2, 3, 4 11	4 COM, 44 LOAD	D Flat	common & load terminals are in the same positions as shown in this schematic. Switch is viewed from the shaft end and shown in position 1.			
TS-5N	5P	2-11	2, 3, 4 11	5 COM, 55 LOAD	D Flat	Terminal numbers are on the switch bottom. Stopper positions are molded on the top of the switch.			


• Standard Hardware shown on last page of this section.

Panel Cutouts




Maximum Effective Panel Thickness With Locking Ring 4.8mm (.189") Without Locking Ring 5.8mm (.228")

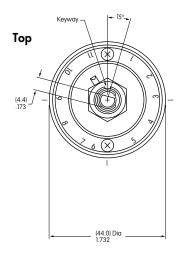

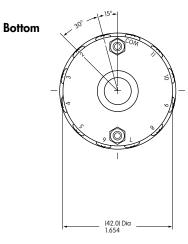



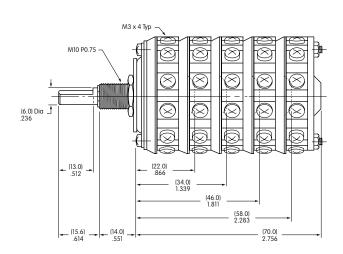






Series PS

Standard Size Rotary Switches

30 AMP/NONSHORTING/ADJUSTABLE STOP/30° INDEXING								
Knurled Shaft	D Flat Shaft	Pole	Number of Positions	Stopper Settings	Number of Terminals	Schematic		
PS-1	PS-1N	1P	2-11	2, 3, 4 11	1 COM, 11 LOAD	두 of Keyway		
PS-2	PS-2N	2P	2-11	2, 3, 4 11	2 COM, 22 LOAD	10^{-1} 0^{-1} 0^{-2}		
PS-3	PS-3N	3P	2-11	2, 3, 4 11	3 COM, 33 LOAD			
PS-4	PS-4N	4P	2-11	2, 3, 4 11	4 COM, 44 LOAD	90 04		
PS-5	PS-5N	5P	2-11	2, 3, 4 11	5 COM, 55 LOAD	${}_{8}^{\circ}$ $\overset{\circ}{\underset{0}{\overset{\circ}{}}}$ ${}_{7}^{\circ}$ ${}_{6}^{\circ}$ ${}_{5}^{\circ}$		

On each deck of multipole devices common & load terminals are in the same positions as shown in this schematic. Switch is viewed from the shaft end and shown in position 1. Terminal numbers are on switch bottom. Stopper positions are molded on the top of the switch.


• Standard Hardware shown on last page of this section.

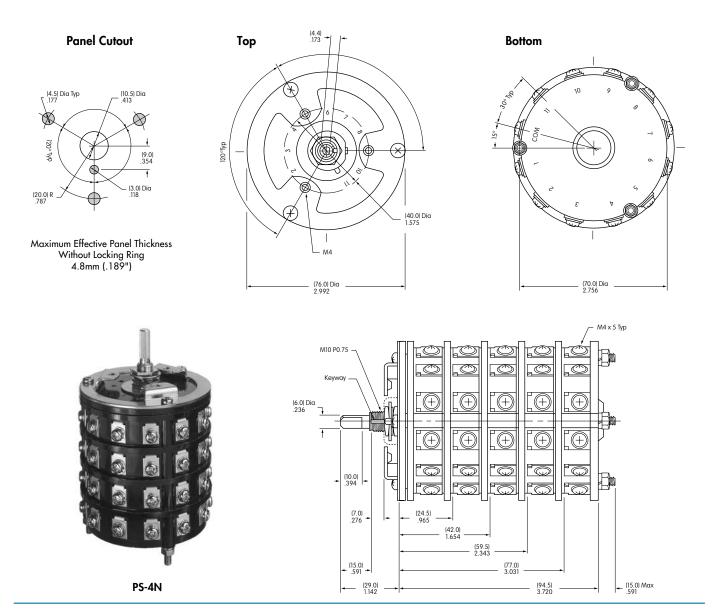





Series HS TS PS


Standard Size Rotary Switches

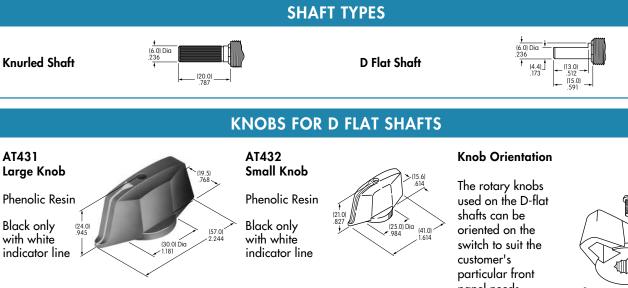





panel needs simply by sliding the knob over the square adaptor at the preferred orientation.



STOPPER SETTING

For HS16, TS, & PS Models

The HS16, TS, and PS switches are supplied with the stopper plate set for the maximum number of positions allowed for that model. Prior to installation, the desired stopper setting should be made:

- Be sure the shaft is turned counterclockwise to the extreme left. If the 1. shaft is not turned counterclockwise to the extreme left, proper setting cannot be achieved.
- 2. Loosen the nut far enough to allow raising the stopper plate for resetting.
- 3. Insert the stopper in the numbered hole for the desired stopper setting. Satisfactory switch functioning cannot be assured if the stopper plate is not properly positioned.
- 4. Tighten the nut firmly against the stopped plate.

Standard Hardware Supplied with HS, TS, and PS:

AT526 Hex Mounting Nut (quantity 3) AT518 Locking Ring (quantity 1) AT520 Split Lockwasher (quantity 1) Use of mounting supports on PS is optional; screws are not provided.

